



Base Station Pole Top Installation Guide

906-0007 • November 4, 2013

Revision History			
Rev #	Revision Update	Revised By	Date
A		Tony Brennan	10-25-13


Installation

Before you start installing the Pole Top Mount, make sure you have the necessary resources available.

- Philips Screw driver
- Loctite (Blue) or Thread Locker
- Base Station Hardware Package

Parts

Pole Top Bracket	1 ea.
Pole Top Cap	1 ea.
8-32 x 1/2" FHP	2 ea.
8-32 x 3/8" PHP w/ Nyloc Patch.	2 ea.

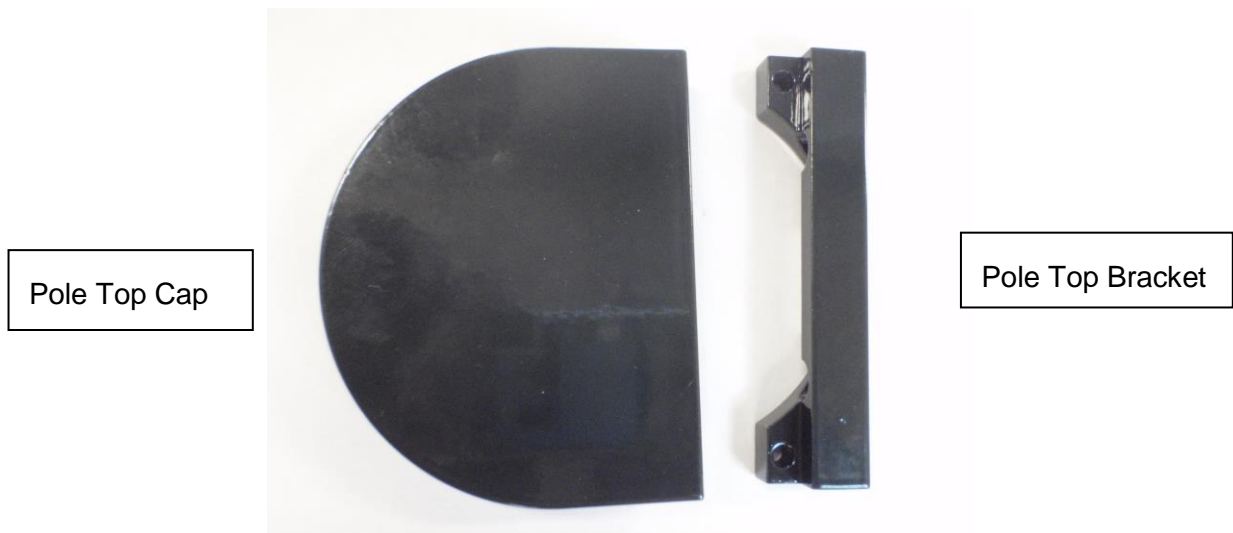

1. Assembly

- 1.1. The Pole Top Mount allows for a Base Station to be fitted on top of a stub pole with a secure cap.
- 1.2. Remove the top two rubber bumpers on the back of the Base Station. This will expose the 8-32 threaded taps used to mount the Pole Top Bracket.



Base Station Rear View

- 1.3. Attach the Pole Top Bracket to the Base Station using the 8-32 x 3/8" PHP screws with the Nyloc Patch.



Base Station Top/ Down View

- 1.4. Apply a drop of thread locker (or Loctite) on the end of the 8-32 x 1/2" FHP screws and fasten the Pole Top Cap to the bracket.



Pole Top Cap attached to Bracket

- 1.5. The Base Station is ready to be placed on top of a pole and secured with two $\frac{1}{4}$ - 20 x $1\frac{1}{2}$ "FHP mounting screws included with the Base Station hardware package.



Completed View Top / Down