



Guardian

Wiring Quick Guide


SPI in the Pedestrian Signal Head (Signal Power Interface)

WARNING 120 VAC Inputs

Blue wire to Walk

White wire to Neutral

Orange wire to Don't Walk

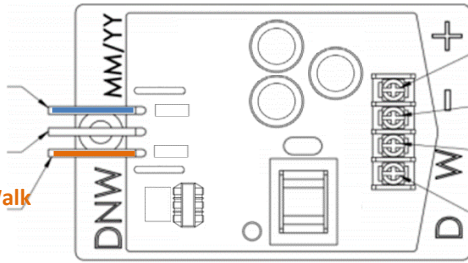

12 VDC Outputs

Terminal 4: +12VDC

Terminal 3: -GND

Terminal 2: S2 W (Walk)



Terminal 1: S1 DW (Don't Walk)

Do NOT set the SPI on the bottom of the Pedestrian Signal Head
Terminals of the SPI must be connected to the same terminals on the Base Station

Cabinet

- ✓ Utilizes the existing Field Wires from cabinet to pedestrian push buttons to place calls
- ✓ NOT polarity dependent

NOTE: For NEW intersection installations, in the absence of city or other local specifications, Campbell Company recommends IMSA 14 Gauge (loop detector wire)

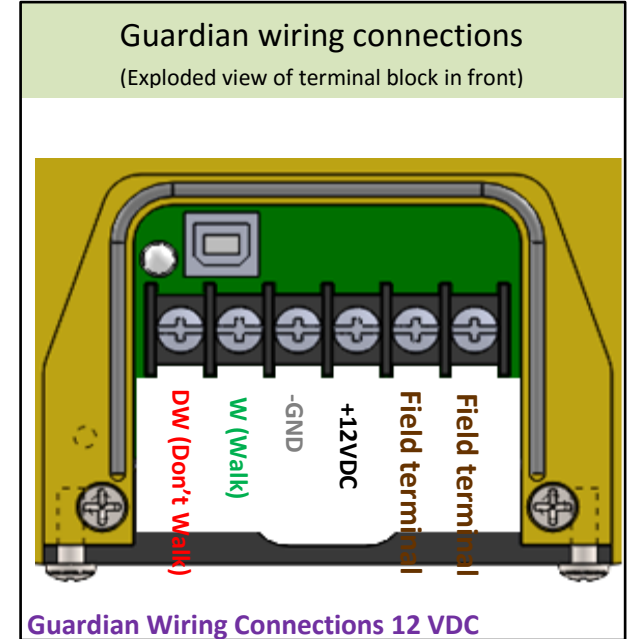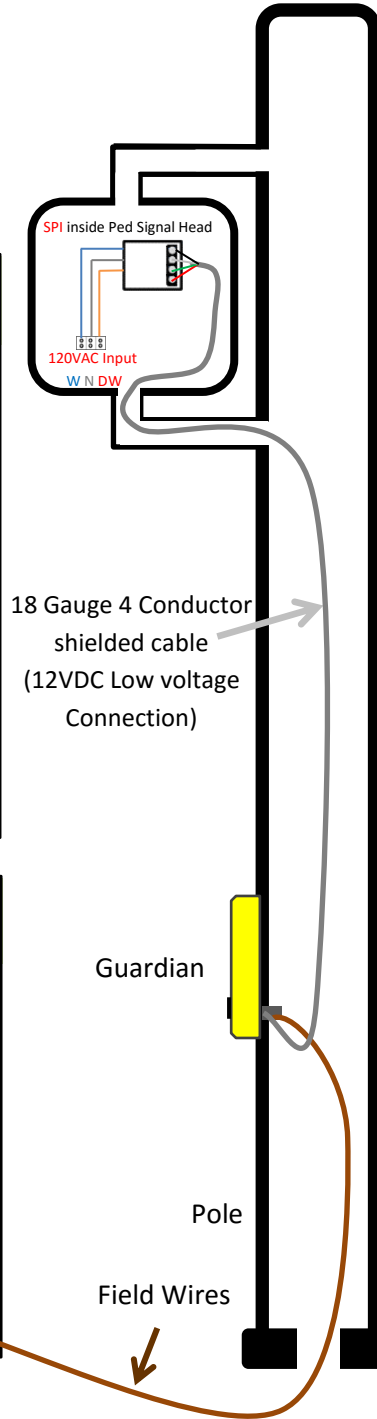

Guardian Wiring Connections 12 VDC

Guardian 400A



Guardian 400A wiring connections

(Exploded view of terminal block on back of unit)

